





Classroom Sound System

There are two types of amplifiers in the classroom. Please use the corresponding one in the classroom:

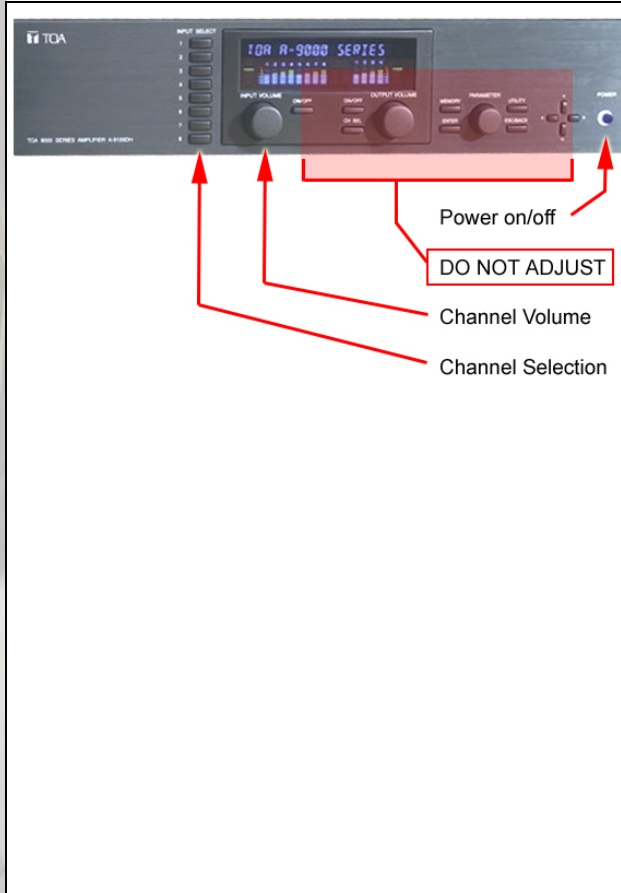

- Press the POWER button on the black amplifier located in the desk cabinet. The button and front display panel will illuminate.
- Press the numbered input button for the source you want to hear. The source channels are labeled as follows:
 1. Wireless Microphone
 2. Desktop Computer
 3. Laptop Computer
 4. DVD / VCR unit
- Adjust the channel volume slowly until you reach a good listening level. The channel volume can be set independently for each input.
- If you do not hear sound from the selected input, press the left “on/off” button once. This will toggle muting of the currently selected channel.
- When you are finished, turn down the channel volume and press the power button to shut off.

Or

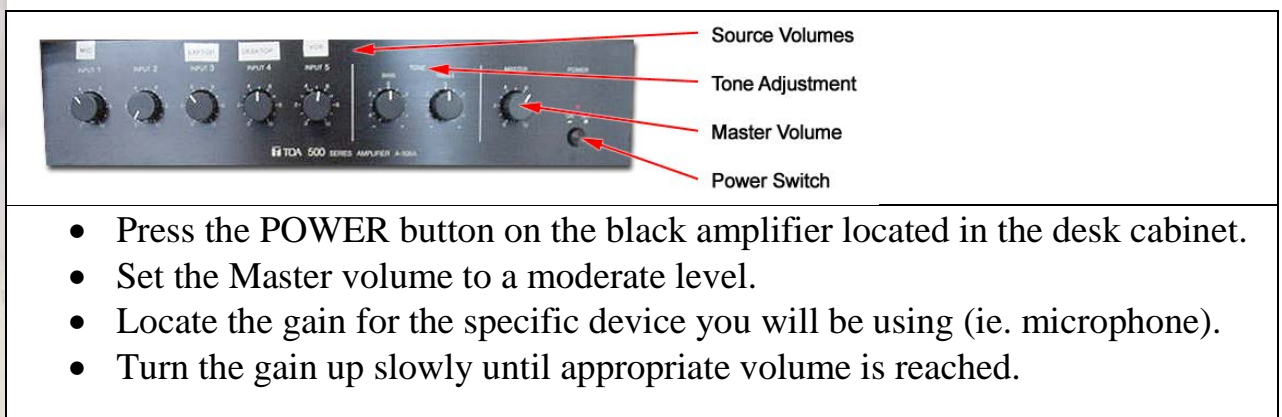

- Press the POWER button on the black amplifier located in the desk cabinet.
- Set the Master volume to a moderate level.
- Locate the gain for the specific device you will be using (ie. microphone).
- Turn the gain up slowly until appropriate volume is reached.