

# Eiki Data Projector



- Press and hold the black button at the top of the Eiki remote marked “ON” for about 3 seconds.
- Wait approximately 30 seconds for the picture to appear.
- For **Laptop** computer input, press the black button on the remote marked “Input 1”.
  - If necessary press it again until it says “RGB (PC Analog)”.
- For **Desktop** computer input, press the black button on the remote marked “Input 2”.
  - If necessary press it again until it says “RGB”.
- For **DVD/VCR** input, press the black button on the remote marked “Input 3”.
  - If necessary press it again until it says “Video”.

To aim the picture at the screen or smartboard (if present) press the ‘Lens Shift’ button and then use the blue arrow keys to aim the projection.

To choose a different screen size press the “Screen” button and cycle through the options until the desired screen size is found.

To turn off the projector press the “Standby” button twice. It is normal for the projector to remain running for several seconds while it cools.

